

# **JV3-250SP**

---

## **Supplement for the Basic Operation manual**

This is the additional explanation of the update functions on the JV3-250SP operation manual.  
Please read and fully understand this manual before using the device.  
If you have any question, contact your local distributor.

**This manual correspond to the models as firmware version 4.10 or later.  
When turning on the power, you can confirm the firmware version.  
The way to confirmation of firmware version is refer to “Switching on the  
power supply” (Operation manual: page 2.3).**

## Switching the ink from SS to SS2 [SS2<>SSCHG]

Switching the ink from SS to SS2, or the other way around, make sure to perform these procedure as follows.



- Changing the ink sets (4 colors/6 colors) is not available on this function. Refer to “Ink exchanging procedure” for changing the ink sets. (Operation manual : page5.27).

### STEP

1. Push the [FUNCTION] key on the LOCAL mode.

FUNCTION  
SETUP < ENT >

2. Select the [MAINTENANCE] pushing the [▲] or [▼] key.

FUNCTION  
MAINTENANCE < ent >

3. Push the [ENTER] key.

Display the [STATION].

MAINTENANCE  
STATION < ent >

4. Select the [SS2<>SSCHG] pushing the [▲] or [▼] key.

MAINTENANCE  
SS2<>SSCHG < ent >

5. Push the [ENTER] key.

6. Remove the ink cartridges.

Discharge the ink to waste ink tank.

DISCHARGE  
REMOVE CARTRIDGE

7. When the right display appears, set the ink cartridges.

Set a cartridge

- When using the SS ink, set the SS2 ink cartridges.
- When using the SS2 ink, set the SS ink cartridges.

After filling up is completing, the menu returns to the LOCAL mode.

FILL UP  
PLEASE WAIT



MAINTENANCE  
SS2<>SSCHG < ent >

# Function Flowchart

\* The following function had added to the Function Flowchart (Operation manual :A.10)



